

PROGRAMMABLE MARINE DIMMER 110/220V AC DXM KP / DXM KP-F

USER AND INSTALLATION MANUAL



Description

Programmable marine dimmer DXMKP/ DXMKP-F can manage up to four 110/220V AC lighting lines in dimming modality and up to four programmable scenarios.

The modules allow the control of the light intensity of the single lines and the activation of scenarios. The light intensity of the lines in each scenario is completely programmable by the user.

The 8 inputs, 4 for the separate control of the lines and 4 for the activation of scenarios, can be connected to any typology of push-buttons, sensors or dry contacts.

On the DXMKP-F there are also 4 optoisolated outputs from which it is possible to read the logical status (ON-OFF) of the main outputs and transfer them to any monitoring systems.



Table of Contents

Before starting	page 3
Functionality	page 3
Programming Scenarios	page 4
Connectors Description	page 5
Module Layout	page 6
Wiring diagram	pages 7-8
Feedback function (DXM KPX-F only)	page 9
Feedback Wiring diagram (DXM KPX-F only)	page 10
Technical specifications	pag. 11

Important information

- This installation manual has been written from manufacturer and is an integrating part of this product.
- The informational message herein is addressed to the operating experts who execute the installation and the extraordinary maintenance of this product.
- The operating experts must possess specific competences and particular abilities to carry out correctly and safely their work.
- The constant observance of the information included in this manual guarantees safety of men, energy saving and a longer duration of product operative-life.
- In order to avoid wrong handling and the consequent risk of incidents, it is important to read this manual carefully, observing scrupulously the supplied information.

Safety Measures

- Carry out any intervention as specified by the manufacturer.
- The installer must verify the correct installation and operation of the product.
- It is prohibited to use the product for improper purposes or purposes different from those provided.
- It is prohibited to tamper or to modify the product.
- Delimitate the work area in order to avoid the access of unauthorized persons.
- Don't leave the work area unattended.

VIAREGGIO YACHTING CORPORATION S.r.l., 2010. All rights reserved

No part of this document may be copied or translated in other languages or forms without the prior written consent of VIAREGGIO YACHTING CORPORATION S.r.l.

The product specifications are subject to modifications without forewarning.
Therefore the present document may not correspond exactly to the characteristics of the product.



Before starting

Place the module inside a switch board and follow carefully the wiring diagram.

Always interrupt the electronics and outputs power supply before carrying out any type of electrical connection on the module according to the following specifications.

Cabling

There are 5 connectors, 3 on the upper side used for the power IN and OUT and 2 on the bottom side used for the inputs and for the power supply of the electronics of the module.

Please refer to the next pages for a detailed description of the connectors and for the wiring diagrams. It is advisable to feed the output power supply before feeding the electronics.

Operating

After completing the connections as shown in the diagrams, check carefully the electrical connections and reactivate power supply on the module. After switching ON the module, the following status must be present on the LEDs:

Ready LED: On

Power In LED: On

Fuse Protection LED: Off

Warning: if the Power In LED is OFF it means that the power feeding is not supplied.

Functionality

The Yachtica Dimmer can manage 4 independent lighting lines in dimming modality. The module uses always a soft switching On and Off (in 3 seconds) to ensure a comfortable and pleasant feeling.

Single Controls

Inputs from 1 to 4: Switch On / Switch Off / Dimming

A short impulse turns on and off the lights like a traditional switch.

A long impulse allows you to change the intensity of the light and stores the level till the next operation. New levels will be stored by a new manual change or by a scenario activation that comprises a different level of luminosity.

Scenarios

Input from 5 to 8:

Allows to program and activate 4 scenarios in which the light intensity can be programmed by the user.



Programming Scenarios

Introduction:

DXMKP has 4 default scenarios, programmed as follows :

Input 5: All Off - Lights turn off, dimming, in 4 seconds.

Input 6: All 30% - Lights reach 30% of intensity, dimming, in 4 seconds.

Input 7: All 60% - Lights reach 60% of intensity, dimming, in 8 seconds.

Input 8: All 100% - Lights reach 100% of intensity, dimming in 8 seconds.

Executing time of scenarios

In the scenarios activated by Input 5 and 6 lights will reach their programmed intensity in 4 seconds.

In the scenarios activated by Input 7 and 8 lights will reach their programmed intensity in 8 seconds.

This different executing time provides the user with more choices for the creation of different atmospheres.

How to choose the desired intensity:

Press an input contact until the light reaches the desired intensity. Repeat this operation for all the lights you want to program.

Leave turned off the lines that you want to be off in your scenario.

How to save a scenario:

Once the lights intensity of the lines has been selected, close an input contact from 5 to 8 for 5 seconds. The saving of the scenario will take place after the lighting lines and/or the module status LEDs have blinked once.

Restore the default scenarios:

Close the input contact of the scenario you want to restore for 10 seconds. The restoring of the default scenario will take place after two blinks of the lighting lines and/or of the module status LEDs.



DXM KP/DXM KP-F Connectors description

CON1 Power Supply For Electronics Connector

Feed the electronic of the module with a voltage of 18 - 32 V DC through clamps + and C.

CON2 Inputs Connector

Connect inputs from 1 to 4 to the push-buttons of the respective four inputs. Inputs from 5 to 8 are dedicated to the activation of scenarios:

Default Scenarios:

Input 5: All Off - Lights turn off, dimming, in 4 second .

Input 6: All 30% - Lights reach 30% of intensity, dimming, in 4 seconds.

Input 7: All 60% - Lights reach 60% of intensity, dimming, in 8 seconds.

Input 8: All 100% - Lights reach 100% of intensity, dimming in 8 seconds.

CON4 Power Feeding Supply Connector

Feed the power part of the module through L and N clamps with a tension of 110/220 V AC. Choose opportunely the size of the cables (**Max 2.5 mm² x 4**) in function of the current absorbed by the managed loads. Power supply must be protected through a fuse or a thermic magnetic switch of 10A (see page 6).

CON3 / CON5 Output Power Connector

Connect the four lines of the dimmerable lighting system to the respective four outputs. Carefully calculate the current absorbed by the outputs (max 2,5A).



RJ45 Connector for the feedback output (only DXM KP-F)

RJ 45 plug for the connection to a generic acquisition devices .


For a detailed explanations, please refer to the chapter: "Feedback Function" at page 8.



DXM KP/DXM KP-F Module Layout

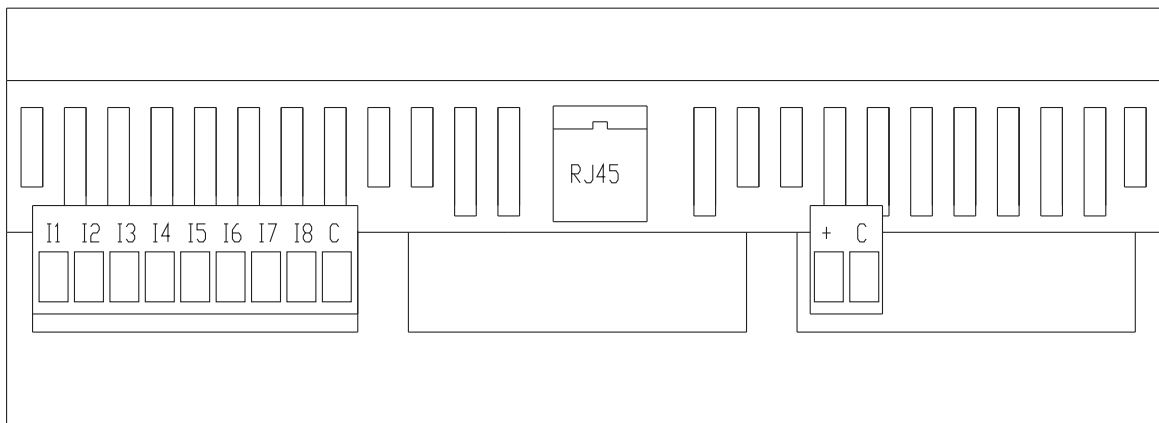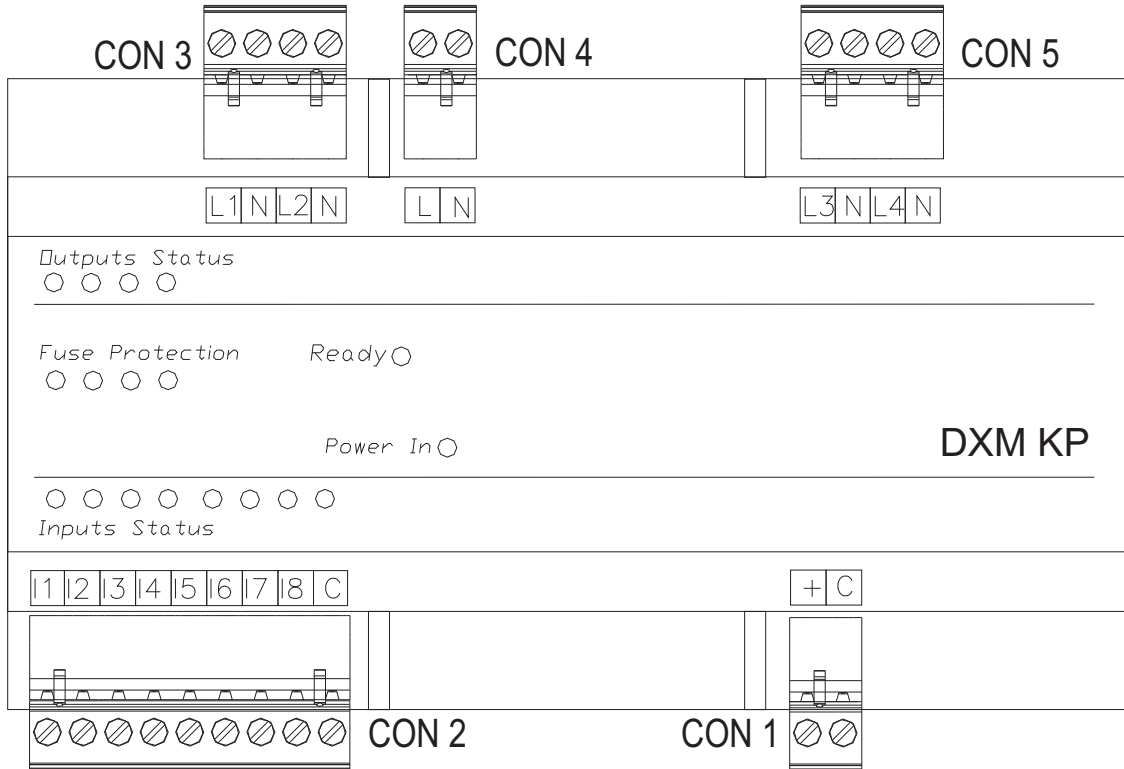


DXM KP/DXM KP-F Wiring Diagram

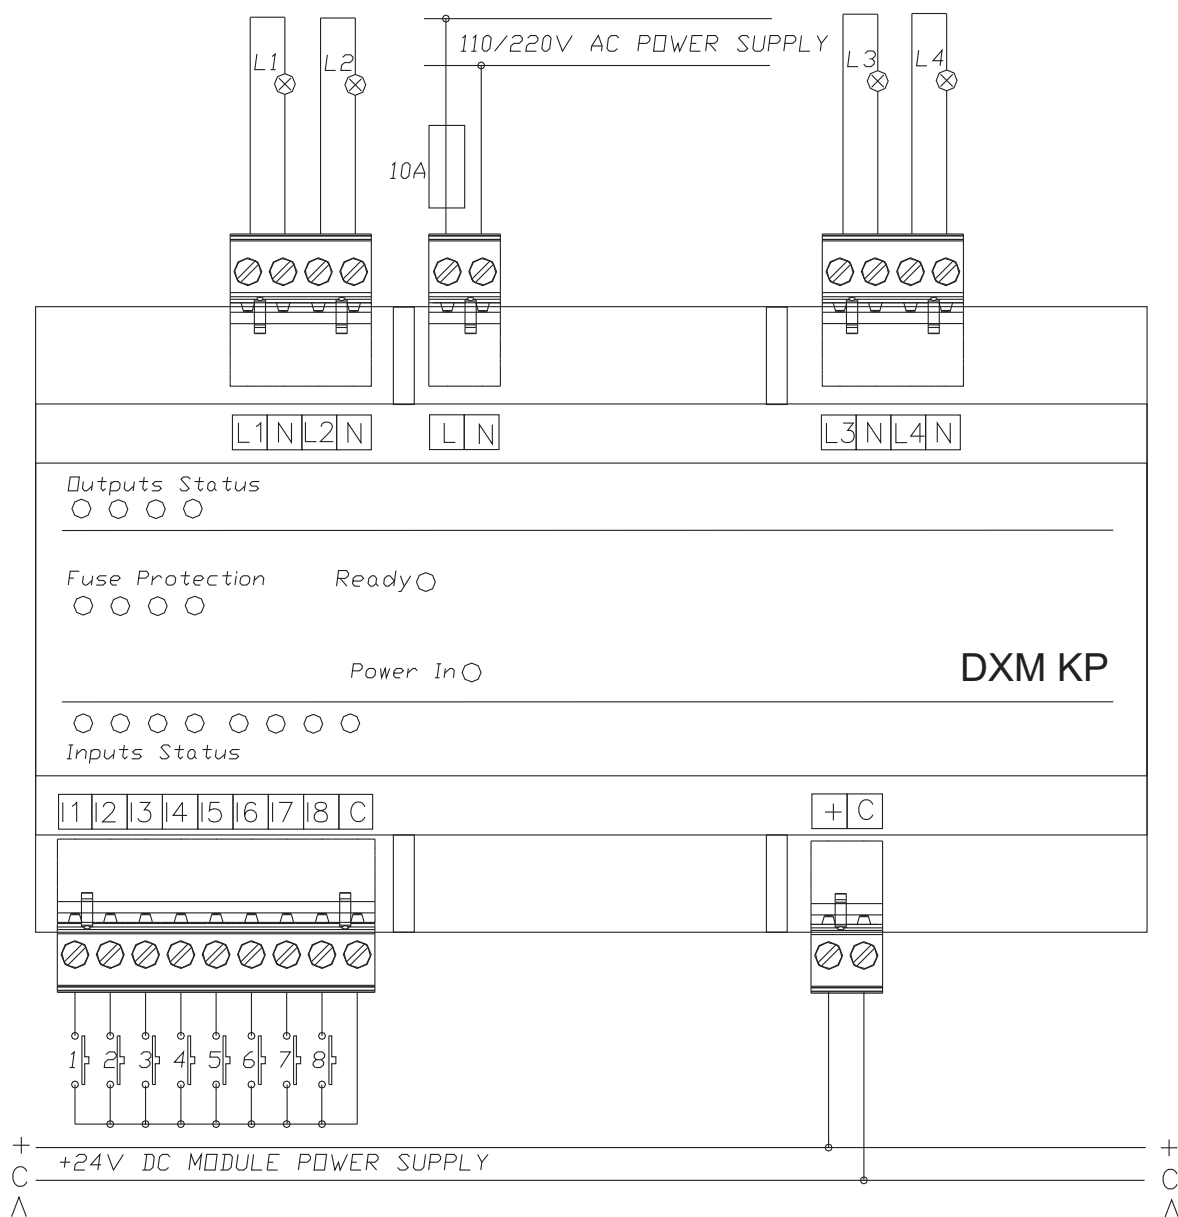

L'installazione del prodotto può essere effettuata soltanto da personale tecnico qualificato del servizio assistenza e/o montaggio



DXM KP/DXM KP-F Wiring Diagram

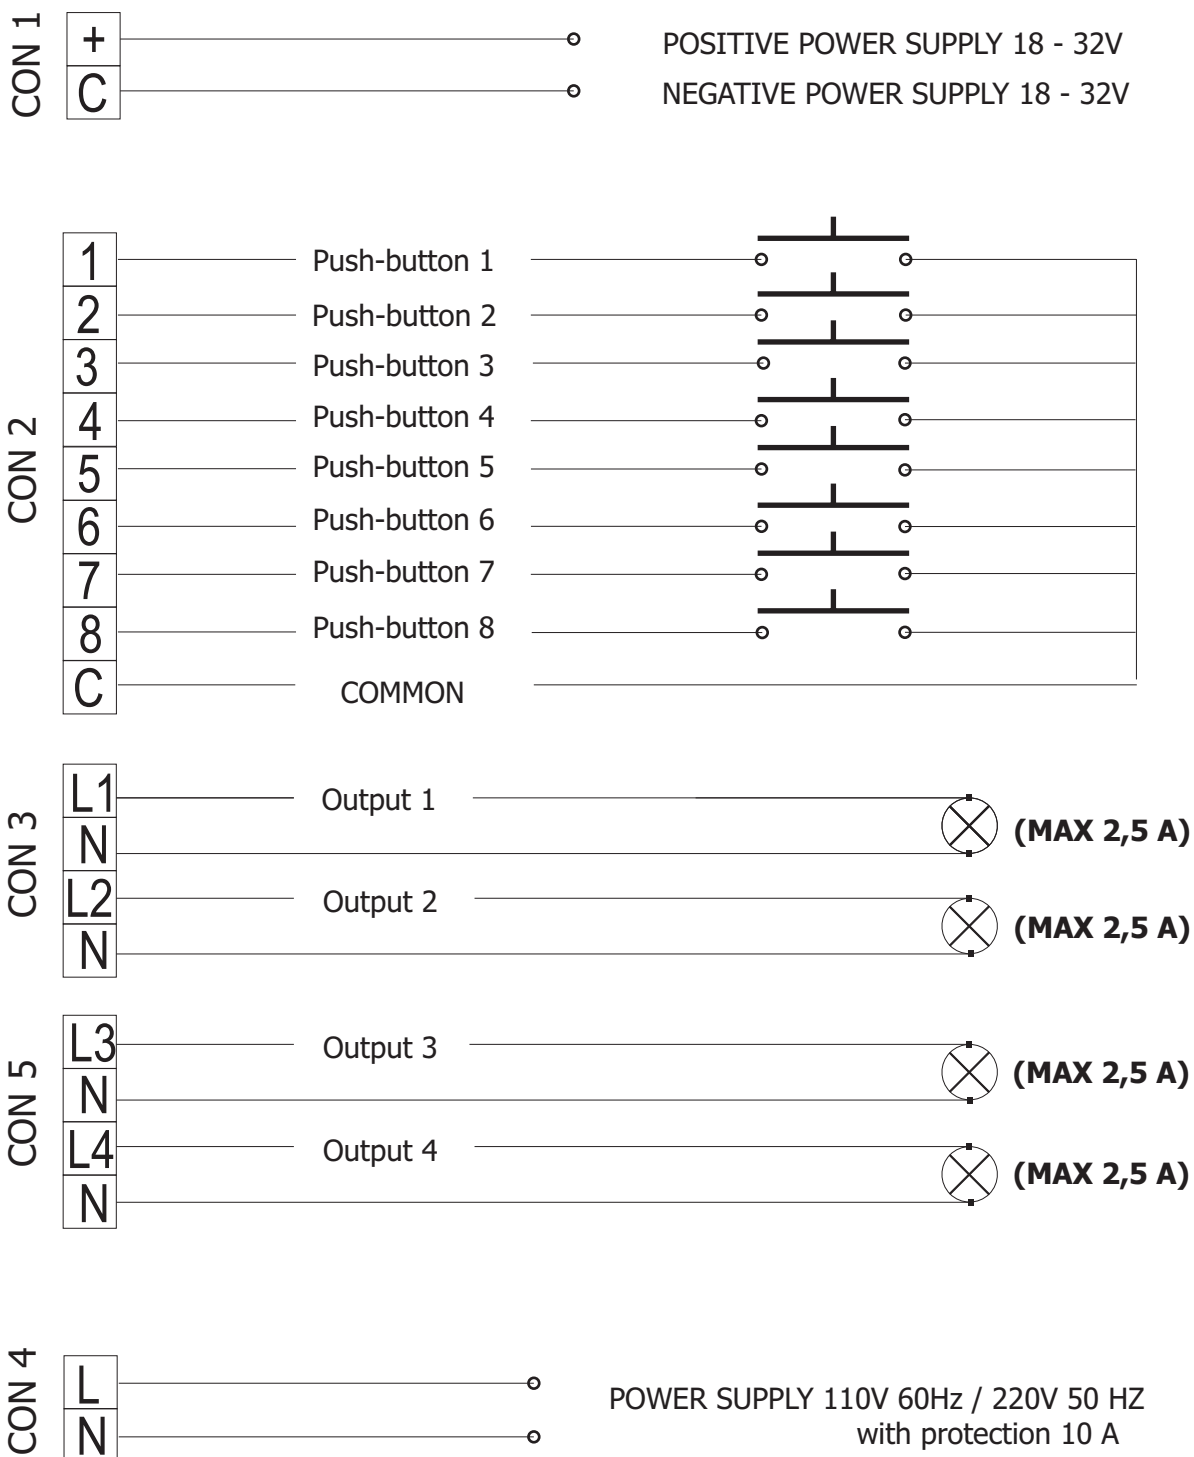

Feedback Function (DXM KP-F only)

Description

The version with feedback is provided with 4 universal optoisolated outputs useable to receive the logical status (ON-OFF) of each dimmerable channel.


The optocoupler can work in a range of voltage, from 5 to 60 V DC with a maximum load of 6mA for each channel.

They can be connected to any kind of acquisition module, with positive input (see diagram 1, pag 9) or with negative input (see diagram 2, pag 9) to obtain the maximum installation flexibility.

The output connection are provided with a normal RJ 45 plug. (Standard plug for Ethernet network).

Connection

RJ 45 schematic of the module side connection, with the draw of the 4 couple of pin referred to the 4 output

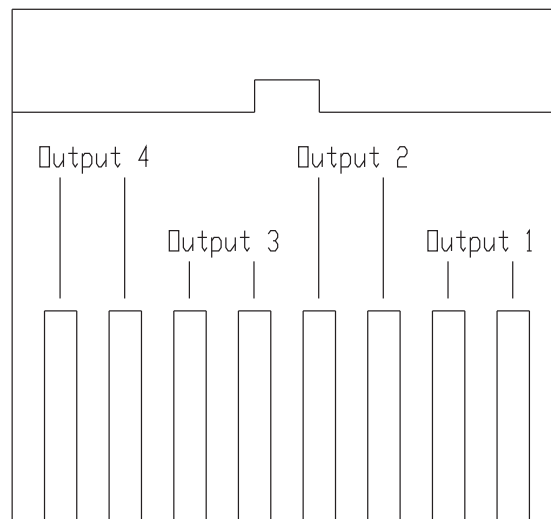



Feedback Wiring Diagram (DXM KP-F only)

Diagram 1 : Connection for Positive Output

To connect the 4 common contacts to a positive (5-60V) and take the signal from the 4 outputs signed as Out 1, Out 2, Out 3, Out 4.


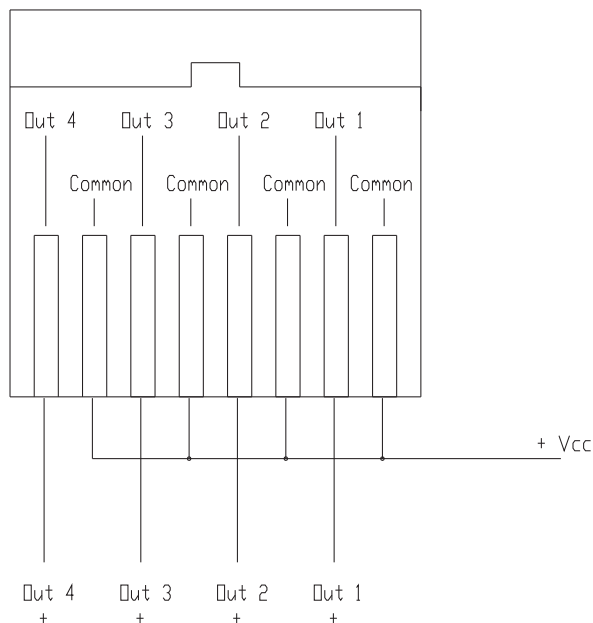


Diagram 2 : Connection for Negative Output

Connect the 4 common contacts to a negative (5-60V) and take the negative signal from the 4 outputs signed as Out 1, Out 2, Out 3, Out 4.

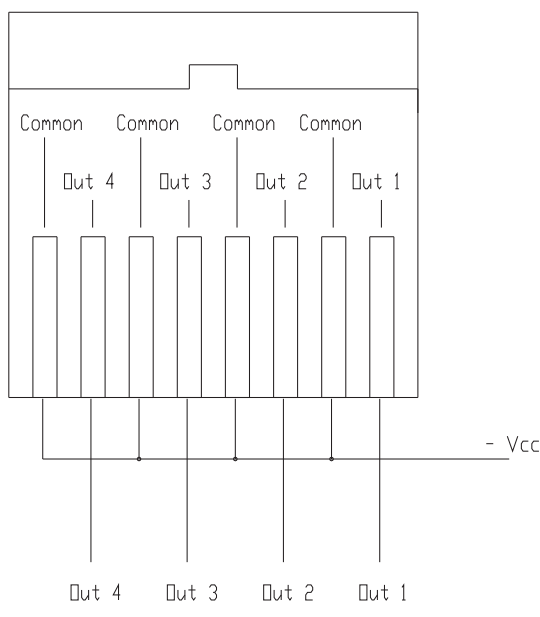

Technical Specifications

Features

- 4 dimmer outputs
- 4 universal feedback outputs (max 6mA) (Only DXM KP-F)
- 4 Programmable Scenarios
- 8 dry contact inputs
- Memory of the output status in case of blackout
- Electronics protection against short-circuit and power line overload
- Automatic management of output power against overheating
- Led for the status monitoring
- DIN-rail mounting
- Removable connectors
- Completely tropicalized electronics

Technical data

Power Supply for Electronics	18-32V DC
Maximum absorption for Electronics	40 mA
Power Supply for Dimmer Outputs	110 V AC - 60 Hz / 220V AC - 50 Hz
Maximum output load	2,5 A each
Feedback outputs (Only DIM KP-F)	Optoisolated 5-60V, max 6mA each
Operating Temperature	+5 +50 °C
Storage Temperature	-40 +70 °C
Relative Humidity	15% 90% non condensing
Protection	IP 20
Dimensions	L 160mm x H 58mm x D 90mm (9 DIN)
Casing Material	Self-extinguish Noryl
Colour	Grey RAL 7035
Certification	CE marked



Usage warning

Electrical tension may cause electric shock and severe burns. Be sure to turn off the electrical supply before carrying out any type of work on the connectors. Omission of observation of these safety measures may cause death or severe lesions to people as well as great material damage.

The appliances of the YACHTICA System must be installed and used exclusively by adequately trained and qualified personnel.

Before proceeding with the use of the appliances, make sure to have correctly carried out the installation procedures indicated in this installation manual.

Before proceeding with the use of the appliances, make sure that the electric installation, carried out by a qualified technician in conformity with the Technical Norms, corresponding to the class of homologation of the vessel, in vigour, is provided with the devices prescribed for the protection against direct and indirect contacts and electrical surcharges.

The appliances of the YACHTICA System must be exclusively used in connection with appliances and external components which are conformed to the Norms comparative to the product.

The appliances of the YACHTICA System must be exclusively used in marine environment.

Do not use the appliance if, upon visual inspection, it shows deterioration of the enclosing box or if the screening wraps of the feeding cables show any wear and tear or damage.

The YACHTICA System may not be used to carry out safety and accident prevention functions since it does not have the redundancy requirements lawfully requested.

VIAREGGIO YACHTING CORPORATION S.r.l. shall only be held responsible for products repaired or eventually modified by Technicians of its Technical Assistance Team or by persons/companies expressly authorized by VIAREGGIO YACHTING CORPORATION S.r.l. to carry out such operations and only if such product/s is/are connected to an electrical installation realized in conformity with the Technical Norms in vigour and is/are used by qualified personnel solely in conformity with the Instructions of Use.

VIAREGGIO YACHTING CORPORATION S.r.l. shall not be held liable for damage of any sort or kind in case of appliances used or installed incorrectly.

VIAREGGIO YACHTING CORPORATION S.r.l. shall not be held liable for any damage to persons or things derived from the use of the examples contained in the documents accompanying the appliances.

All rights reserved. Any form of duplication, even partial, of this documentation, must be previously authorized by VIAREGGIO YACHTING CORPORATION S.r.l..

Conformity declarations

All the devices of the Yachtica System is designed and tested with the requirements of the European EMC Directive 89/336 and in accordance with the Low Voltage Directive 93/68



VIAREGGIO YACHTING CORPORATION S.R.L.
TEL. +39 0584 383354 - FAX +39 0584 383270
E-MAIL: info@yachtica.com
VIAREGGIO - ITALIA